


Instruction and operation manual

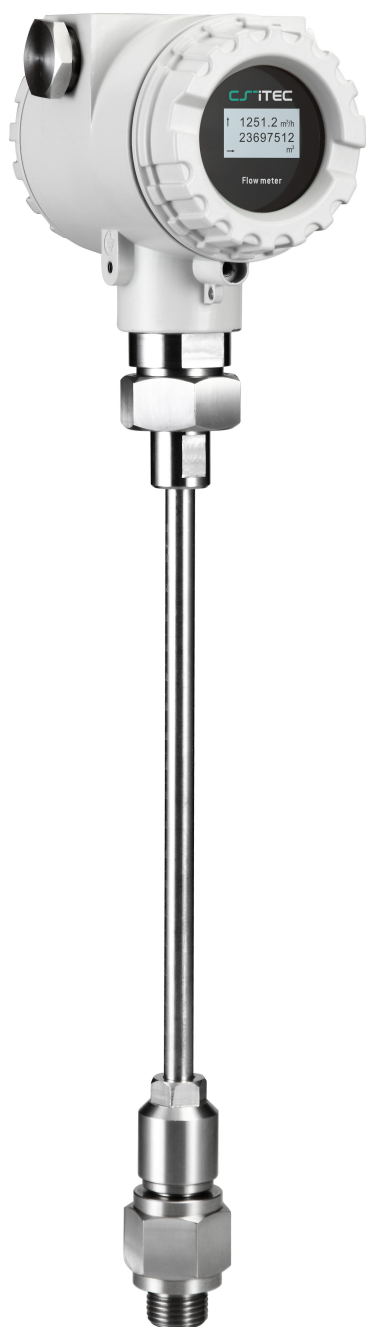

S 450

Thermal mass flow sensor

Dear Customer,
thank you for choosing our product.

The operating instructions must be read in full and carefully observed before starting up the device. The manufacturer cannot be held liable for any damage which occurs as a result of non-observance or non-compliance with this manual.

Should the device be tampered with in any manner other than a procedure which is described and specified in the manual, the warranty is cancelled and the manufacturer is exempt from liability.


The device is destined exclusively for the described application.

CS-iTEC offers no guarantee for the suitability for any other purpose. CS-iTEC is also not liable for consequential damage resulting from the delivery, capability or use of this device.

Table of contents

1. Safety instructions.....	4
2. Application.....	6
3. Features.....	6
4. Technical Data.....	7
4.1 General.....	7
4.2 Electrical Data.....	8
4.3 Output-Signals.....	8
4.4 Accuracy	8
5. Dimensional drawing.....	8
6. Determination of the installation point.....	9
7. Inlet and Outlet section.....	9
8. Installation	10
8.1 Installation Requirements.....	11
8.2 Installation Procedure	11
8.3 Electrical connection	14
9. Signal outputs.....	16
9.1 Analog output.....	16
9.2 Pulse output.....	16
9.3 HART output	17
9.4 Modbus output	17
9.5 M-Bus output	19
10. Configuration.....	19
11. Optional extra accessories.....	21
11.1 Sensor display.....	21
11.2 Service kit.....	21
12. Calibration.....	22
13. Maintenance.....	22
14. Disposal or waste.....	22
15. Warranty.....	22
Appendix.....	24

1. Safety instructions

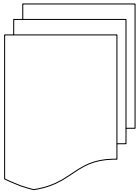

Please check if this instruction manual accords to the product type.

Please observe all notes and instructions indicated in this manual. It contains essential information which have to be observed before and during installation, operation and maintenance. Therefore this instruction manual has to be read carefully by the technician as well as by the responsible user / qualified personnel.

This instruction manual has to be available at the operation site of the flow sensor at any time. In case of any obscurities or questions, regarding this manual or the product, please contact the manufacturer.



WARNING!

Compressed air!

Any contact with quickly escaping air or bursting parts of the compressed air system can lead to serious injuries or even death!

- Do not exceed the maximum permitted pressure range (see sensors label).
- Only use pressure tight installation material.
- Avoid that persons get hit escaping air or bursting parts of the instrument.
- The system must be pressureless during maintenance work.



WARNING!

Voltage used for supply!

Any contact with energized parts of the product, may lead to a electrical shock which can lead to serious injuries or even death!

- Consider all regulations for electrical installations.
- The system must be disconnected from any power supply during maintenance work.
- Any electrical work on the system is only allowed by authorized qualified personal.

**WARNING!****Permitted operating parameters!**

Observe the permitted operating parameters, any operation exceeding this parameters can lead to malfunctions and may lead to damage on the instrument or the system.

- Do not exceed the permitted operating parameters.
- Make sure the product is operated in its permitted limitations.
- Do not exceed or undercut the permitted storage and operation temperature and pressure.
- The product should be maintained and calibrated frequently, at least annually.

General safety instructions

- It is allowed to use the product in explosive areas. Please contact the manufacturer.
- Please observe the national regulations before/during installation and operation.

Remarks

- It is not allowed to disassemble the product.
- Always use spanner to mount the product properly.

**ATTENTION!****Measurement values can be affected by malfunction!**

The product must be installed properly and frequently maintained, otherwise it may lead to wrong measurement values, which can lead to wrong results.

- Always observe the direction of the flow when installing the sensor. The direction is indicated on the housing.
- Do not exceed the maximum operation temperature at the sensors tip.
- Avoid condensation on the sensor element as this will affect the accuracy enormously.

Storage and transportation

- Make sure that the transportation temperature of the sensor without display is between -30°C ... 70°C and with display between -10°C ... 60°C .
- For transportation it is recommended to use the packaging which comes with the sensor.
- Please make sure that the storage temperature of the sensor is between -10°C ... 50°C .
- Avoid direct UV and solar radiation during storage.
- For the storage the humidity has to be $<90\%$, no condensation.

2. Application

The S 450 is a flow sensor which is designed to measure the consumption of compressed air and gases within the permissible operating parameters. These parameters can be found in the technical data section.

The S 450 can measure the following values:

- Velocity of the compressed air or gas.
- Volume flow of the compressed air or gas.
- Total consumption of the compressed air or gas.

The default factory settings are: Velocity in m/s , Volume flow in m^3/h and Total Consumption in m^3 . Other units can be programmed by the optional display or the service kit.

The S 450 flow sensor is developed to be used in explosive areas.

The S 450 flow sensor is mainly used in compressed air systems and process gases measurement in industrial environment.

3. Features

- Direct measurement of mass flow and standard flow without the need of pressure and temperature compensation.
- Wide range of tube sizes are supported with insertion type for bigger pipes and inline types for smaller pipes.
- No moving parts, no clogging.
- All Sensor parts which come into contact with the measurement medium are made of stainless steel 316L.
- Robust metal enclosure is suitable for outdoor applications in harsh

environments.

- Wireless bluetooth interface for connecting on site.
- Optional display directly on the sensor, showing flow rate, consumption, medium temperature and diagnostic result.

4. Technical Data

4.1 General

CE	
Parameters	Standard unit flow: m ³ /h other units: m ³ /min, l/min, l/s, cfm, kg/h, kg/min, kg/s Standard unit velocity: m/s
Reference conditions	ISO1217 20°C 1000 mbar (Standard-Unit) DIN1343 0°C 1013,25 mbar (Norm-Unit)
Principle of measurement	Thermal mass flow
Sensor	Resistive sensor
Measuring medium	Air, gas (non corrosive gas) -40°C... 150°C medium temp. insertion type
Operating temperature	-40°C... 65°C ambient temperature
Humidity of the meas. medium	< 90%, no condensation
Operating pressure	1.6 MPa
Housing material	All alloy
Material of the probe tube, sensor head and the screwing	Stainless steel 316L
Protection class	IP 67
Dimensions	See dimensional drawing on the next page
Display (optional)	128 x 64
Tube diameter	From DN25 (1") upwards
Screwing thread	G1/2" (ISO 228/1)
Weight	1.75 kg (220 mm version)

4.2 Electrical Data

Power supply	16... 30 VDC, 5 W
--------------	-------------------


4.3 Output-Signals

Analog output	See chapter 9.1
Pulse output	See chapter 9.2
HART output	See chapter 9.3
Modbus output	See chapter 9.4
M-Bus output	See chapter 9.5

4.4 Accuracy

Accuracy	Inaccuracy $\pm 1.5\%$ of reading + 0.3% of full scale Repeatability: 0.25% of reading
Stated accuracy at	Ambient/process temperature $23^{\circ}\text{C} \pm 3^{\circ}\text{C}$ Ambient/process humidity $< 90\%$ Process pressure at 0.6 MPa

5. Dimensional drawing

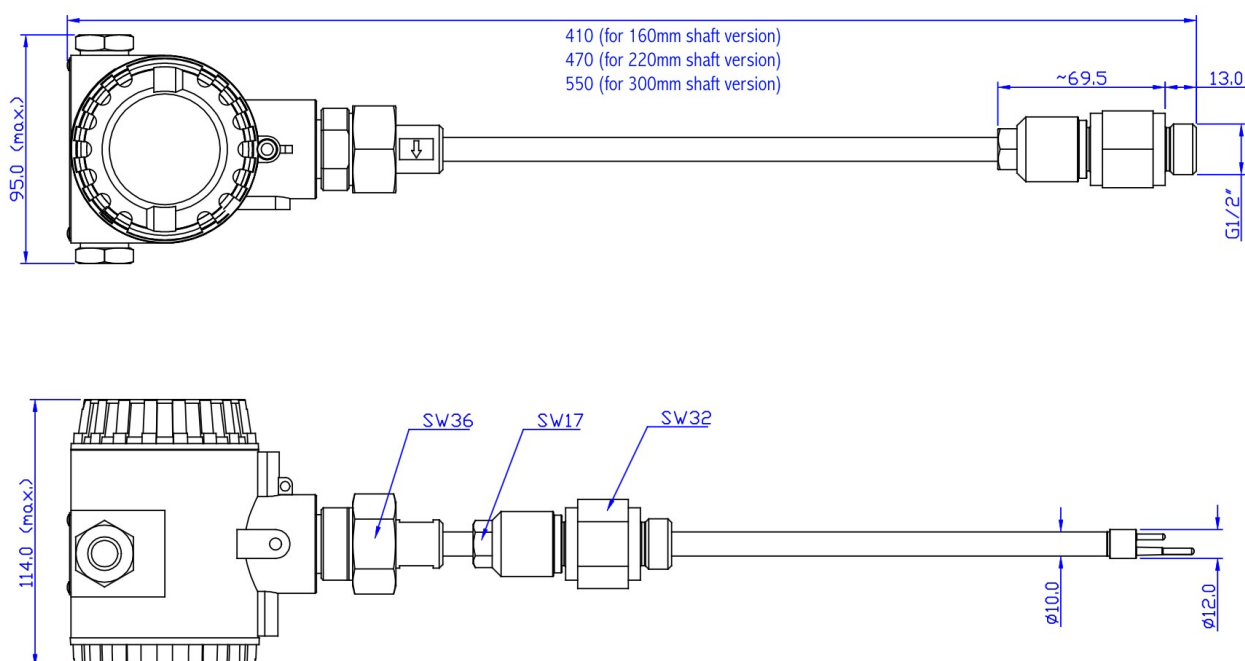

6. Determination of the installation point

In order to maintain the accuracy stated in the technical data, the sensor must be inserted in the centre of a straight pipe section with unhindered flow characteristics.

Unhindered flow characteristics are achieved if the section in front of the sensor (inlet) and after the sensor (outlet) are sufficiently long, absolutely straight and free of obstructions such as edges, seams, curves etc..

Please consider that enough space exists at your site for a adequate installation as described in this manual.




ATTENTION!

Wrong measurement is possible, if the sensor is not installed correctly.

- Careful attention must be paid to the design of the inlet and outlet section. Obstructions can cause counter-flow turbulence as well as turbulence in the direction of the flow.
- It is strongly recommend not to install S 450 permanently in wet environment as it exists usually right after a compressor outlet.

7. Inlet and Outlet section

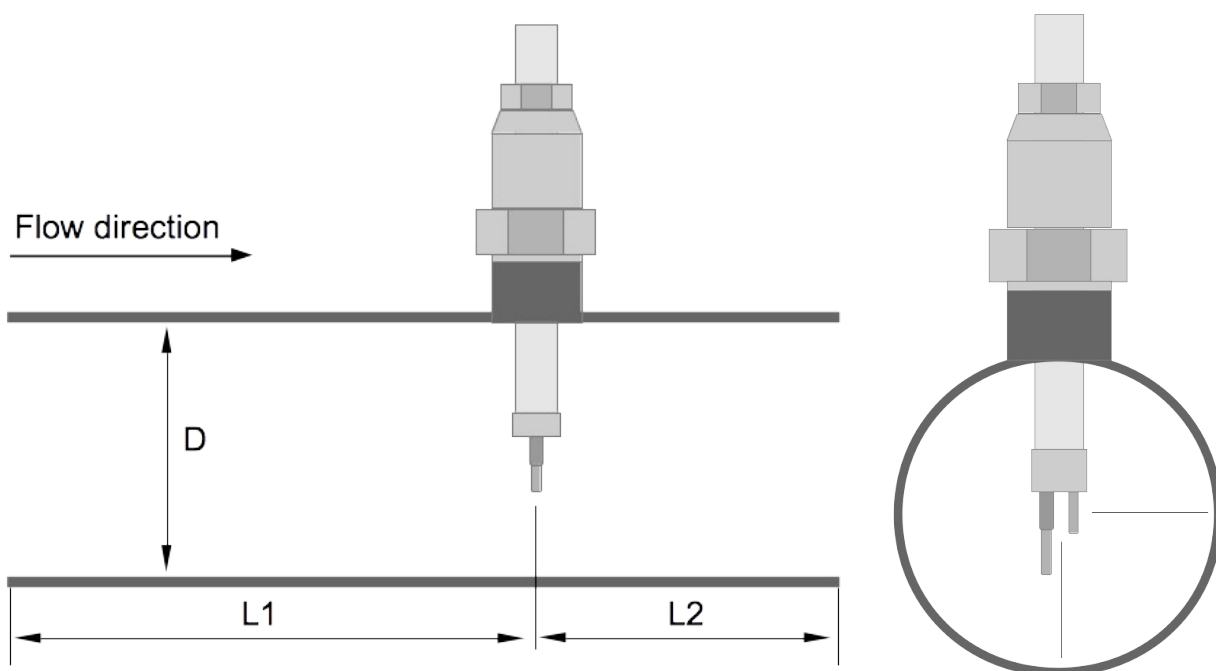

L1 : Length of inlet section

L2 : Length of outlet section

D : Diameter of pipe

The following table shows the necessary equalizing sections in relation to existing obstructions. It gives the respective values which are required. If its not possible to observe the indicated equalizing sections, deviations in measuring results must be expected.

Flow obstructions before the measurement section	Min. length inlet (L1)	Min. length outlet (L2)
Slight curve (bend <90°C)	12 x D	5 x D
Reduction (Tube narrows towards measurement section)	15 x D	5 x D
Expansion (Tube expands towards measurement section)	15 x D	5 x D
90°C bend or T piece	15 x D	5 x D
2 x 90°C bends on one level	20 x D	5 x D
2 x 90°C bends 3 dimensional change of direction	35 X D	5 x D
Shut-off valve	45 x D	5 x D

8. Installation

Before installing the sensor, please make sure that all components listed below are included in your package.

Qty	Description	Item No.
1	Sensor	0695 0450
1	Sealing ring	No P/N
1	Alignment key	No P/N
1	G ½" ball valve	A554 0008
1	Bluetooth dongle	No P/N
1	Instruction manual	No P/N
1	Calibration certificate	No P/N

**ATTENTION!**

Do not insert the sensor with high force, it may happen that the sensor tip strikes on the pipe inner wall and the sensor gets damaged!

8.1 Installation Requirements

To install the sensor a ball valve or a nozzle is needed.


- The inner thread has to be G 1/2".
- The diameter of the hole must be $\geq 13\text{mm}$, otherwise the shaft can not be inserted.

8.2 Installation Procedure

The following steps explain the procedure of an appropriate installation.

Determination of the insertion depth of the sensor

The sensor tip has to be placed in the centre of the pipe. For this the probe shaft has a scale. To determine the right position please calculate the insertion depth like described below.

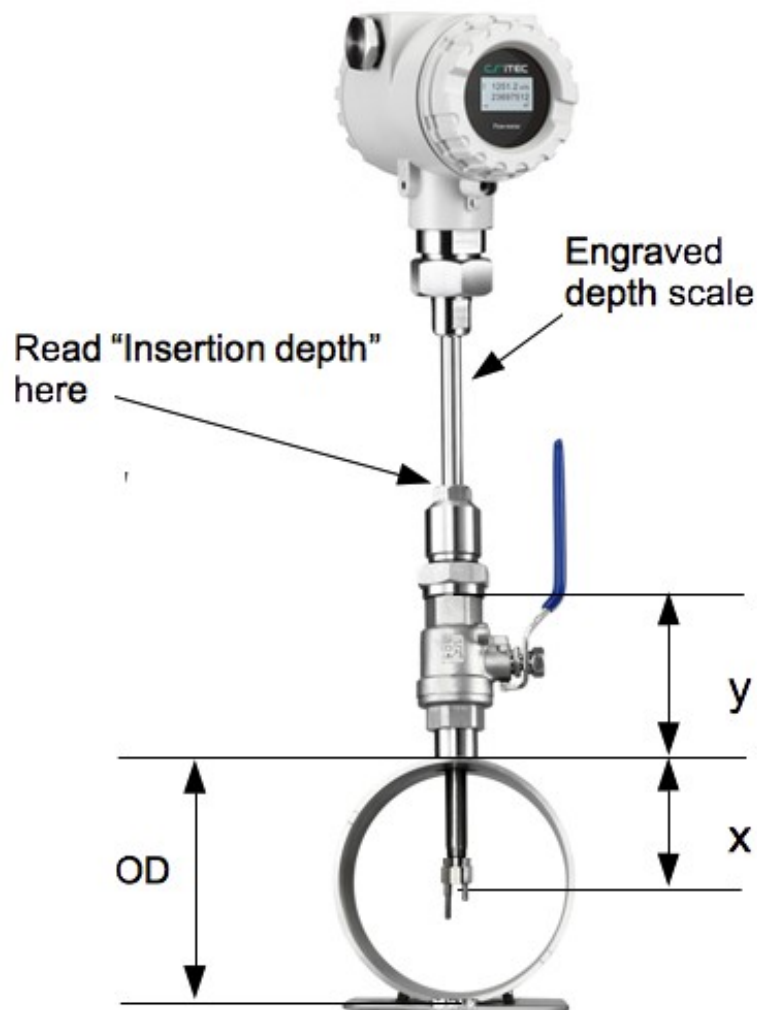

Insertion depth = $x + y$

$x = \frac{OD}{2}$; OD = Outer diameter of pipe


Example for a 2" pipe and a 87 mm ball valve:

$y = 87 \text{ mm}$; $OD = 60.3 \text{ mm}$

$x = \frac{OD}{2} = \frac{60.3 \text{ mm}}{2} = 30.15 \text{ mm}$

Insertion depth = $30.15 \text{ mm} + 87 \text{ mm} = 117.15 \text{ mm}$

Installation of the sensor




First please observe the flow direction indicated on the shaft. It must match the flow direction of the compressed air or gas.



1. Ball valve has to be closed.
2. The sensor head has to be completely covered by the connection thread (see photo on the left).
3. Underlay the "O-ring" at the thread of the ball valve before screwing the flow sensor.
4. Screw the connection thread tightly to the ball valve
5. Align flow sensor to flow direction.
6. Open ball valve and tighten clamp sleeve manually by hand.
7. Move flow sensor slightly to the determined insertion depth by means of the scale.
8. Tighten the clamp sleeve at the connection thread so that the flow sensor can not longer be moved by the pressure in the pipe, however it should be possible to move the sensor shaft manually.
9. With the aid of the alignment key make sure that the actual flow direction is same as the arrow shows (the angle deviation should not be larger than $\pm 2^\circ$ to the perfect position, please see picture on the next page).
10. Tighten clamp sleeve with clamping torque 20...30 Nm.
11. During the final check control the installation depth again because sometimes the shaft is moved from its original position due the compressed air.

Maximum angle deviation of a proper installation:

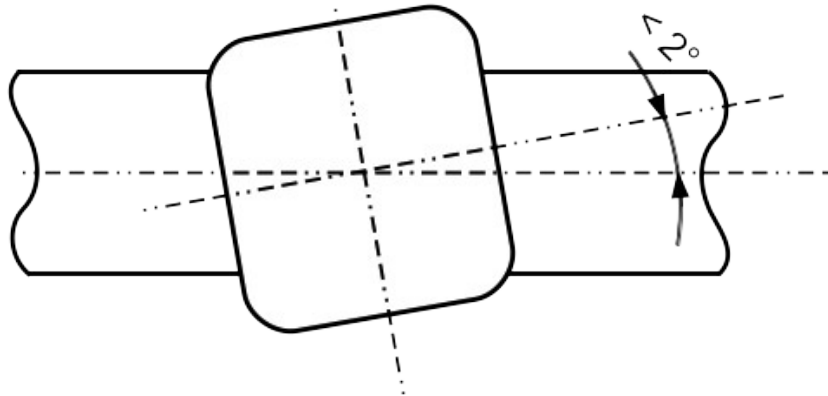

Removal of the sensor


1. Hold the flow sensor.
2. Release the clamp sleeve at the connection thread.
3. Pull out the shaft slowly until the value "10" can be read at the scale.
4. Close the ball valve.
5. Release the connection thread and unscrew the flow sensor.

8.3 Electrical connection

When installing the cables please consider following point:

- Keep the stripped and twisted length of cable shield as short as possible.
- Screen and ground the signal lines.
- Unused cable entries must be closed with closers.
- Cable outer diameter should be between 6 and 8 mm.
- Single wire cross-section should be between 0.25... 0.75 mm².
- The thread size for the cable glands is M20 / 1.5.

Connection diagram

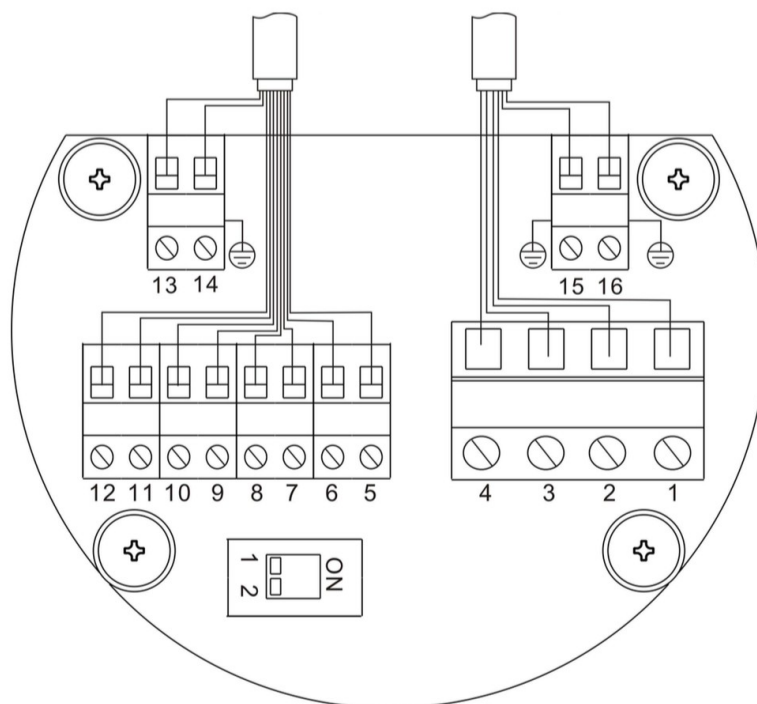

Pin	Pulse and analog	Modbus	M-Bus	HART
1	GND_{SDI}	GND_{SDI}	GND_{SDI}	GND_{SDI}
2	$+V_{\text{B}}$	$+V_{\text{B}}$	$+V_{\text{B}}$	$+V_{\text{B}}$
3	$-V_{\text{B}}$	$-V_{\text{B}}$	$-V_{\text{B}}$	$-V_{\text{B}}$
4	SDI	SDI	SDI	SDI
5	D1	D1	D1	D1
6	D2	D2	D2	D2
7	P1	P1	P1	
8	P2	P2	P2	
9	$-I_1$	$-I_1$	$-I_1$	$-I_1 / -\text{HART}$
10	$+I_1$	$+I_1$	$+I_1$	$+I_1 / +\text{HART}$
11	$-I_2$	+D	M1	
12	$+I_2$	-D	M2	
13		GND_{M}		
14	Earth	Earth	Earth	Earth

15	Earth	Earth	Earth	Earth
16	Earth	Earth	Earth	Earth

Legend to pin assignment

SDI	= Digital signal (internal use)	P1	= Pulse output 1
GND_{SDI}	= Ground for SDI	P2	= Pulse output 2
$+V_B$	= Positive supply voltage	D1	= Direction input D1 (flow switch)
$-V_B$	= Negative supply voltage	D2	= Direction input D2 (flow switch)
$+I_1$	= Positive signal output (analog 1)	+D	= Modbus data +
$-I_1$	= Negative signal output (analog 1)	-D	= Modbus data -
$+I_2$	= Positive signal output (analog 2)	M1	= M-Bus 1
$-I_2$	= Negative signal output (analog 2)	M2	= M-Bus 2

9. Signal outputs

9.1 Analog output

The S 450 in the standard configuration comes with 2 analog outputs and 1 pulse output. All signals are electrically isolated. The analog output can be used as an active output (current is sourced through the positive connection pin) or passive output. In the passive configuration a current signal is modulated into the external signal voltage.

Active	: 4 to 20mA, $R_L < 400 \Omega$
Passive	: 4 to 20mA, supply voltage 18... 30 VDC, $R_L < 500 \Omega$
For HART	: $R_L \geq 250 \Omega$
Uncertainty	: $< 0.3 \%$ of reading
Resolution	: 0.005 mA

9.2 Pulse output

No switch, no polarity required, galv. Isolate
 Max. rating: 30 VDC, 200 mA
 Pulse width: 10... 100 msec (depending on flow rate)

The maximum number of pulse per second is limited to 45 pulse per second. As a result depending on the flow rate and the selected consumption unit the maximum flow rate is limited to the values in the table below.

Unit	Max flow		
Pulse / consumption unit	1/1	1/10	1/100
m ³ /h	162,000	1,620,000	16,200,000
m ³ /min	2,700	27,000	270,000
l/min	2,700	27,000	270,000
cfm	2,700	27,000	270,000
Kg/h	162,000	1,620,000	16,200,000
Kg/min	2,700	27,000	270,000
Kg/s	45	450	4,500
	Default	To be configured by service software	

9.3 HART output


The HART signal is modulated on analog output 1. In case S 450 is used in a multi drop configuration (more than 1 slave on the 4-20 mA line) the analogue output can not be used anymore.

Device type : Slave
 Polling address : 1 to 15
 Bus address can be set through software
 Physical interface : BELL 202
 Protocol version : V 5.2
 Tag : S 450
 Tag description : Flow meter
 Frame/parity/Stop : 8, O, 1

9.4 Modbus output

The version with modbus comes with one analog output and one pulse output. The modbus communication requires to activate terminal resistors at the last device on the bus system. If the S 450 is the last device on the bus system, the DIP switches on the connector board

should be set to "ON" position.

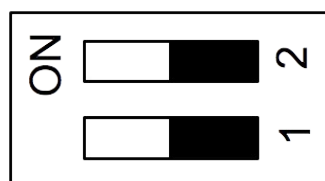

Termination resistor
network switch

Device type : Slave

Address range : 1 to 251

Bus address can be set through software

Physical interface : RS485 in accordance with EIA/TIA-485 standard

Baudrates : 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud

Transm. mode : ASCII, RTU

Response time : Direct data access = 0 to 255 ms (can be configured)

Remarks

- Modbus communication settings can be changed by the service software.

Index	Channel description	Unit	Resolution	Format	Length	Modbus address
0	Velocity	m/s	0.1	FLOAT	4 Byte	0
1	Flow	m ³ /h	0.1	FLOAT	4 Byte	6
2	Consumption	m ³	1	UNIT32	4 Byte	12
3	Reverse consumption	m ³	1	UNIT32	4 Byte	18
4	Medium temperature	°C	0.1	FLOAT	4 Byte	24
5	Ambient temperature	°C	0.1	FLOAT	4 Byte	36

Remarks

- all numbers are in little-endian format.
- Function code: 03.
- Different units have different resolutions.

9.5 M-Bus output

The version with M-Bus comes with one analog output and one pulse output.

Device type : Slave
 Address range : 1 to 251
 Bus address can be set through software
 Physical interface : Meter-Bus, EN1434-3
 Baudrates : 300, 2400, 9600 Baud
 Frame/parity/S : 8, E, 1
 top

10. Configuration

In order to fully utilize the functionality of S 450 a configuration is required. There are various parameters which need to be set in the flow meter. The table below gives an overview about the available settings.

Area	Available settings	Default
Measurement	Tube diameter Flow unit Consumption unit Reference conditions Gas type selection Consumption counter Operation pressure Flow direction	54.0 m ³ /h m ³ P _s = 1000 hPA T _s = 20°C Air 0 m ³ 0.6 MPa Standard
Analog output 1	Measurement channel Scaling Active / passive	Flow 4 mA: 0 m ³ /h 20 mA: max flow Active
Analog output 2	Measurement channel Scaling Active / passive	Medium Temperature 4 mA: -50°C 20 mA: 150°C Active
Pulse output	Pulse / Alarm Pulses per consumption	Pulse 1


	unit	
HART	Fieldbus address Manufacturer ID Device type code	0 255 0
Modbus	Device address Baudrate Framing/parity/Stop bit Transmission mode	1 19200 8, N, 1 RTU
M-Bus	Address Manufacturer code Baudrate	0 END 300

Configuration settings have to be done through the service software which is included in the scope of delivery. The service software can be installed on any PC with windows operating system. To communicate with the sensor the PC needs to have a Bluetooth interface, if the PC doesn't have a Bluetooth interface the dongle which comes with the sensor can be used. Alternatively a service kit can be used which is as option available. Through the service kit the S 450 is connected to one USB port of the PC.

Bluetooth

Bluetooth provides a convenient way of configuring the sensor wireless. S 450 needs to be powered up.

- Ensure that the distance between S 450 and PC is not more than 5 meter.
- Ensure that the PC Bluetooth antenna should point roughly in the direction of the display (front part).
- Please follow the instruction in the service software and the help file.

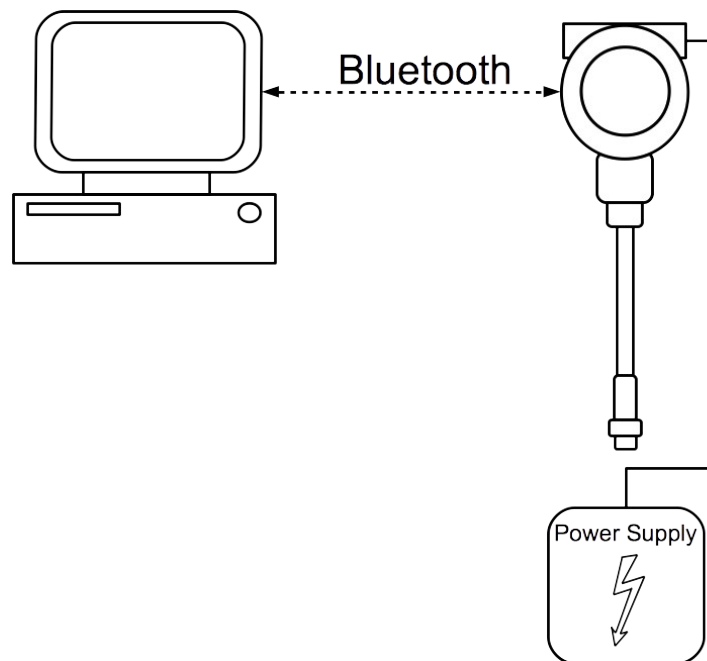


11. Optional extra accessories

11.1 Sensor display

With the Sensor display it is possible to show the values of the velocity, the flow and the consumption, moreover it shows error messages.

11.2 Service kit

The diagram below shows the connection when using the optional service kit. Please ensure that also in this case the power supply of either S 450 or of the service kit is connected because the USB port is not supplying enough power.

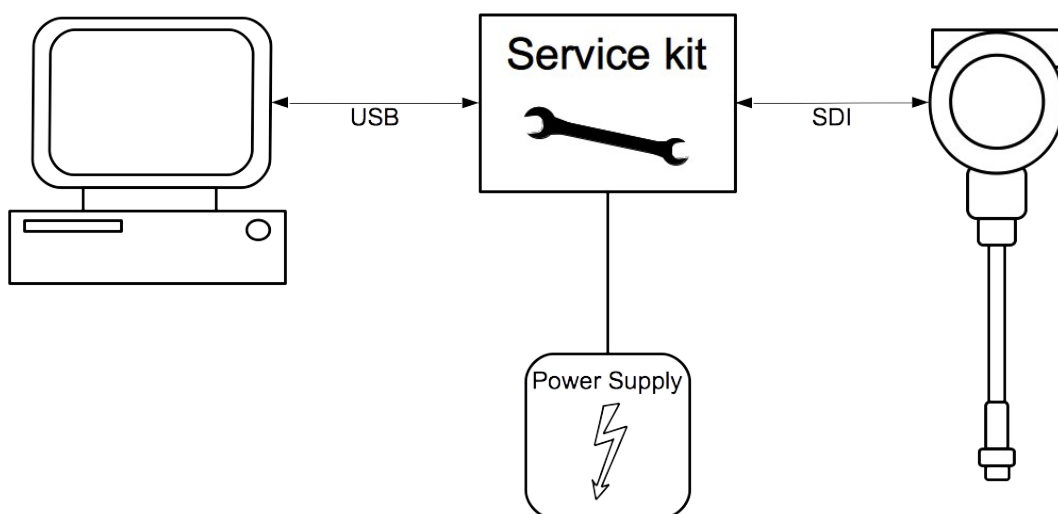

12. Calibration

It is recommended to calibrate respectively adjust the sensor annually. For this please contact the manufacturer. Please check the date of the last calibration in the attached calibration certificate.

13. Maintenance

To clean the sensor it is recommended to use distilled water or isopropyl alcohol only. If the contamination can not be removed the sensor has to be inspected and maintained by the manufacturer.

14. Disposal or waste

Electronic devices are recyclable material and do not belong in the household waste.

The sensor, the accessories and its packings must be disposed according to your local statutory requirements. The dispose can also be carried by the manufacturer of the product, for this please contact the manufacturer.

15. Warranty

CS-iTEC provides a warranty for this product of 24 months covering the material and workmanship under the stated operating conditions from the date of delivery. Please report any findings immediately and within the warranty time. If faults occurring during the warranty time CS-iTEC will repair or replace the defective unit, without charge for labour and material costs but there is a charge for other service such as transport and packing costs.

Excluded from this warranty is:

- Damage caused by:
 - Improper use and non-adherence to the instruction manual.
 - Use of unsuitable accessories.
 - External influences (e.g. damage caused by vibration, damage during transportation, excess heat or moisture).

The warranty is cancelled:

- If the user opens the measurement instrument without a direct request written in this instruction manual.
- If repairs or modifications are undertaken by third parties or unauthorised persons.

- If the serial number has been changed, damaged or removed.

Other claims, especially those for damage occurring outside the instrument are not included unless responsibility is legally binding.

Warranty repairs do not extend the period of warranty.



ATTENTION!

Batteries have a reduced warranty time of 12 month.

Appendix

Scaling table analogue output (standard range):

Medium: Air at ISO 1217; 20°C; 1000 mbar

Tube		Flow							
inch	mm	m³/h	m³/min	l/min	l/s	cfm	kg/h	kg/min	kg/s
1/2"	16.10	45.6	0.76	759.8	12.66	26.8	54.1	0.90	0.02
3/4"	21.70	89.1	1.49	1485.2	24.75	52.4	105.8	1.76	0.03
1"	25.00	122.2	2.04	2036.8	33.95	71.9	145.2	2.42	0.04
	26.00	132.9	2.21	2214.8	36.91	78.2	157.8	2.63	0.04
	27.30	147.7	2.46	2461.3	41.02	86.9	175.4	2.92	0.05
	28.50	162.0	2.70	2700.2	45.00	95.4	192.4	3.21	0.05
	30.00	180.9	3.02	3015.5	50.26	106.5	214.9	3.58	0.06
1 1/4"	32.80	218.8	3.65	3647.0	60.78	128.8	259.9	4.33	0.07
	36.00	266.3	4.44	4438.6	73.98	156.7	316.3	5.27	0.09
	36.30	271.1	4.52	4518.6	75.31	159.6	322.0	5.37	0.09
1 1/2"	39.30	320.6	5.34	5343.6	89.06	188.7	380.8	6.35	0.11
	40.00	332.6	5.54	5542.6	92.38	195.7	395.0	6.58	0.11
	41.80	365.0	6.08	6083.2	101.39	214.8	433.5	7.23	0.12
	43.10	389.5	6.49	6491.8	108.20	229.3	462.6	7.71	0.13
	45.80	442.0	7.37	7367.3	122.79	260.2	525.0	8.75	0.15
2"	50.00	530.8	8.85	8846.0	147.43	312.4	630.4	10.51	0.18
	51.20	557.2	9.29	9287.1	154.79	328.0	661.9	11.03	0.18
	53.10	600.1	10.00	10001.5	166.69	353.2	712.8	11.88	0.20
	54.50	632.9	10.55	10548.8	175.81	372.5	751.8	12.53	0.21
	57.50	708.9	11.81	11814.4	196.91	417.2	842.0	14.03	0.23
	60.00	773.7	12.90	12895.5	214.92	455.4	919.0	15.32	0.26
	64.20	889.1	14.82	14818.0	246.97	523.3	1056.0	17.60	0.29
2 1/2"	65.00	912.5	15.21	15208.1	253.47	537.1	1083.8	18.06	0.30
	68.90	1026.5	17.11	17108.6	285.14	604.2	1219.3	20.32	0.34
	70.30	1071.2	17.85	17854.1	297.57	630.5	1272.4	21.21	0.35
	71.10	1095.8	18.26	18262.7	304.38	644.9	1301.5	21.69	0.36
	76.10	1258.3	20.97	20972.2	349.54	740.6	1494.6	24.91	0.42
3"	80.00	1392.3	23.20	23204.9	386.75	819.5	1653.7	27.56	0.46
	82.50	1482.5	24.71	24707.6	411.79	872.5	1760.8	29.35	0.49
	84.90	1570.0	26.17	26166.0	436.10	924.0	1864.7	31.08	0.52
	90.00	1766.4	29.44	29439.4	490.66	1039.6	2098.0	34.97	0.58
4"	100.00	2183.3	36.39	36388.6	606.48	1285.1	2593.3	43.22	0.72
	107.10	2507.4	41.79	41789.4	696.49	1475.8	2978.2	49.64	0.83
	110.00	2645.0	44.08	44083.1	734.72	1556.8	3141.6	52.36	0.87
5"	125.00	3419.6	56.99	56993.8	949.90	2012.7	4061.7	67.70	1.13
	133.70	3912.2	65.20	65203.4	1086.72	2302.6	4646.8	77.45	1.29
6"	150.00	4930.2	82.17	82169.3	1369.49	2901.8	5855.9	97.60	1.63
	159.30	5560.5	92.67	92674.2	1544.57	3272.8	6604.5	110.08	1.83
	182.50	7306.7	121.78	121778.9	2029.65	4300.6	8678.7	144.65	2.41
	190.00	7919.6	131.99	131993.8	2199.90	4661.3	9406.7	156.78	2.61
8"	200.00	8785.7	146.43	146428.3	2440.47	5171.1	10435.4	173.92	2.90
	206.50	9366.0	156.10	156100.8	2601.68	5512.6	11124.7	185.41	3.09
10"	250.00	13744.0	229.07	229067.2	3817.79	8089.4	16324.7	272.08	4.53
	260.40	14929.1	248.82	248818.2	4146.97	8786.9	17732.3	295.54	4.93
12"	300.00	19815.0	330.25	330249.9	5504.16	11662.7	23535.6	392.26	6.54
	309.70	21117.1	351.95	351951.3	5865.85	12429.0	25082.2	418.04	6.97
	339.60	25391.4	423.19	423190.1	7053.17	14944.8	30159.1	502.65	8.38
	400.00	35226.7	587.11	587110.9	9785.18	20733.6	41841.1	697.35	11.62
	500.00	55041.6	917.36	917360.8	15289.35	32396.3	65376.8	1089.61	18.16
	600.00	79260.0	1321.00	1320999.5	22016.66	46650.7	94142.5	1569.04	26.15
	700.00	107881.6	1798.03	1798027.1	29967.12	63496.8	128138.5	2135.64	35.59
	800.00	140906.6	2348.44	2348443.6	39140.73	82934.5	167364.5	2789.41	46.49
	900.00	178334.9	2972.25	2972248.9	49537.48	104964.0	211820.7	3530.35	58.84
	1000.00	220166.6	3669.44	3669443.1	61157.38	129585.2	261507.1	4358.45	72.64

Scaling table analogue output (max. range):
Medium: Air at ISO1217; 20°C; 1000 mbar

Tube		Flow							
inch	mm	m³/h	m³/min	l/min	l/s	cfm	kg/h	kg/min	kg/s
1/2"	16.10	90.98	1.52	1516.31	25.27	53.55	108.06	1.80	0.03
3/4"	21.70	177.84	2.96	2963.94	49.40	104.67	211.23	3.52	0.06
1"	25.00	243.88	4.06	4064.73	67.75	143.54	289.68	4.83	0.08
	26.00	265.20	4.42	4419.99	73.67	156.09	315.00	5.25	0.09
	27.30	294.72	4.91	4912.02	81.87	173.47	350.06	5.83	0.10
	28.50	323.32	5.39	5388.74	89.81	190.30	384.03	6.40	0.11
	30.00	361.08	6.02	6017.98	100.30	212.52	428.88	7.15	0.12
1 1/4"	32.80	436.69	7.28	7278.17	121.30	257.03	518.69	8.64	0.14
	36.00	531.48	8.86	8857.96	147.63	312.82	631.27	10.52	0.18
	36.30	541.06	9.02	9017.70	150.29	318.46	642.66	10.71	0.18
1 1/2"	39.30	639.84	10.66	10664.07	177.73	376.60	759.99	12.67	0.21
	40.00	663.68	11.06	11061.30	184.35	390.63	788.30	13.14	0.22
	41.90	731.90	12.20	12198.30	203.30	430.78	869.33	14.49	0.24
	43.10	777.34	12.96	12955.60	215.93	457.52	923.30	15.39	0.26
	45.80	882.17	14.70	14702.79	245.05	519.22	1047.81	17.46	0.29
2"	50.00	1059.23	17.65	17653.79	294.23	623.44	1258.12	20.97	0.35
	51.20	1112.05	18.53	18534.19	308.90	654.53	1320.86	22.01	0.37
	53.10	1197.59	19.96	19959.88	332.66	704.88	1422.46	23.71	0.40
	54.50	1263.13	21.05	21052.15	350.87	743.45	1500.31	25.01	0.42
	57.50	1414.66	23.58	23577.72	392.96	832.64	1680.29	28.00	0.47
	60.00	1544.12	25.74	25735.30	428.92	908.83	1834.06	30.57	0.51
	64.20	1774.33	29.57	29572.14	492.87	1044.33	2107.49	35.12	0.59
2 1/2"	65.00	1821.03	30.35	30350.57	505.84	1071.82	2162.97	36.05	0.60
	68.90	2048.60	34.14	34143.28	569.05	1205.76	2433.26	40.55	0.68
	70.30	2137.86	35.63	35631.08	593.85	1258.30	2539.29	42.32	0.71
	71.10	2186.80	36.45	36446.65	607.44	1287.10	2597.41	43.29	0.72
	76.10	2511.24	41.85	41853.97	697.57	1478.06	2982.77	49.71	0.83
3"	80.90	2841.44	47.36	47357.42	789.29	1672.41	3374.98	56.25	0.94
	82.50	2958.51	49.31	49308.50	821.81	1741.31	3514.03	58.57	0.98
	84.90	3133.15	52.22	52219.09	870.32	1844.10	3721.45	62.02	1.03
	90.00	3525.11	58.75	58751.80	979.20	2074.80	4187.01	69.78	1.16
4"	100.00	4357.22	72.62	72620.27	1210.34	2564.56	5175.37	86.26	1.44
	107.10	5003.91	83.40	83398.43	1389.97	2945.19	5943.48	99.06	1.65
	110.00	5278.56	87.98	87976.01	1466.27	3106.84	6269.71	104.50	1.74
5"	125.00	6824.50	113.74	113741.61	1895.69	4016.75	8105.93	135.10	2.25
	133.70	7807.53	130.13	130125.42	2168.76	4595.34	9273.54	154.56	2.58
6"	150.00	9839.04	163.98	163984.07	2733.07	5791.04	11686.51	194.78	3.25
	159.30	11096.91	184.95	184948.45	3082.47	6531.40	13180.56	219.68	3.66
	182.50	14581.94	243.03	243032.33	4050.54	8582.61	17319.98	288.67	4.81
	190.00	15805.08	263.42	263418.04	4390.30	9302.52	18772.79	312.88	5.21
8"	200.00	17533.48	292.22	292224.67	4870.41	10319.82	20825.73	347.10	5.78
	206.50	18691.68	311.53	311527.93	5192.13	11001.51	22201.39	370.02	6.17
10"	250.00	27428.75	457.15	457145.91	7619.10	16143.96	32579.03	542.98	9.05
	260.40	29793.76	496.56	496562.71	8276.05	17535.95	35388.11	589.80	9.83
12"	300.00	39544.48	659.07	659074.72	10984.58	23275.01	46969.71	782.83	13.05
	309.70	42143.03	702.38	702383.91	11706.40	24804.46	50056.19	834.27	13.90
	339.60	50673.25	844.55	844554.17	14075.90	29825.16	60188.12	1003.14	16.72
	400.00	70301.30	1171.69	1171688.40	19528.14	41377.80	83501.71	1391.70	23.19
	500.00	109845.79	1830.76	1830763.12	30512.72	64652.81	130471.43	2174.52	36.24
	600.00	158177.93	2636.30	2636298.89	43938.31	93100.05	187878.86	3131.31	52.19
	700.00	215297.74	3588.30	3588295.71	59804.93	126719.51	255724.00	4262.07	71.03
	800.00	281205.22	4686.75	4686753.58	78112.56	165511.20	334006.86	5566.78	92.78
	900.00	355900.35	5931.67	5931672.51	98861.21	209475.12	422727.43	7045.46	117.42
	1000.00	439383.15	7323.05	7323052.48	122050.87	258611.25	521885.71	8698.10	144.97

Scaling table analogue output (high speed range):

Medium: Air at ISO1217; 20°C; 1000 mbar

Tube		Flow							
inch	mm	m³/h	m³/min	l/min	l/s	cfm	kg/h	kg/min	kg/s
1/2"	16.10	110.16	1.84	1835.96	30.60	64.84	130.84	2.18	0.04
3/4"	21.70	215.33	3.59	3588.77	59.81	126.74	255.76	4.26	0.07
1"	25.00	295.30	4.92	4921.62	82.03	173.81	350.74	5.85	0.10
	26.00	321.11	5.35	5351.77	89.20	189.00	381.40	6.36	0.11
	27.30	356.85	5.95	5947.52	99.13	210.03	423.86	7.06	0.12
	28.50	391.48	6.52	6524.74	108.75	230.42	464.99	7.75	0.13
	30.00	437.20	7.29	7286.64	121.44	257.33	519.29	8.65	0.14
1 1/4"	32.80	528.75	8.81	8812.49	146.87	311.21	628.03	10.47	0.17
	36.00	643.52	10.73	10725.32	178.76	378.76	764.35	12.74	0.21
	36.30	655.12	10.92	10918.73	181.98	385.59	778.14	12.97	0.22
1 1/2"	39.30	774.73	12.91	12912.18	215.20	455.99	920.20	15.34	0.26
	40.00	803.59	13.39	13393.14	223.22	472.97	954.48	15.91	0.27
	41.90	886.19	14.77	14769.83	246.16	521.59	1052.59	17.54	0.29
	43.10	941.21	15.69	15686.78	261.45	553.97	1117.94	18.63	0.31
	45.80	1068.14	17.80	17802.30	296.71	628.68	1268.70	21.15	0.35
2"	50.00	1282.52	21.38	21375.40	356.26	754.87	1523.34	25.39	0.42
	51.20	1346.48	22.44	22441.40	374.02	792.51	1599.31	26.66	0.44
	53.10	1450.06	24.17	24167.64	402.79	853.47	1722.33	28.71	0.48
	54.50	1529.41	25.49	25490.17	424.84	900.18	1816.59	30.28	0.50
	57.50	1712.89	28.55	28548.16	475.80	1008.17	2034.52	33.91	0.57
	60.00	1869.63	31.16	31160.58	519.34	1100.43	2220.69	37.01	0.62
	64.20	2148.38	35.81	35806.27	596.77	1264.49	2551.77	42.53	0.71
2 1/2"	65.00	2204.93	36.75	36748.79	612.48	1297.77	2618.94	43.65	0.73
	68.90	2480.46	41.34	41341.05	689.02	1459.95	2946.22	49.10	0.82
	70.30	2588.55	43.14	43142.50	719.04	1523.56	3074.60	51.24	0.85
	71.10	2647.80	44.13	44129.99	735.50	1558.44	3144.97	52.42	0.87
	76.10	3040.63	50.68	50677.24	844.62	1789.65	3611.57	60.19	1.00
3"	80.90	3440.45	57.34	57340.87	955.68	2024.97	4086.46	68.11	1.14
	82.50	3582.20	59.70	59703.26	995.05	2108.40	4254.82	70.91	1.18
	84.90	3793.65	63.23	63227.43	1053.79	2232.86	4505.98	75.10	1.25
	90.00	4268.24	71.14	71137.32	1185.62	2512.19	5069.68	84.49	1.41
4"	100.00	5275.76	87.93	87929.41	1465.49	3105.20	6266.39	104.44	1.74
	107.10	6058.78	100.98	100979.72	1683.00	3566.07	7196.43	119.94	2.00
	110.00	6391.34	106.52	106522.31	1775.37	3761.80	7591.43	126.52	2.11
5"	125.00	8263.17	137.72	137719.57	2295.33	4863.52	9814.74	163.58	2.73
	133.70	9453.44	157.56	157557.27	2625.95	5564.08	11228.50	187.14	3.12
6"	150.00	11913.22	198.55	198553.68	3309.23	7011.86	14150.16	235.84	3.93
	159.30	13436.25	223.94	223937.58	3732.29	7908.28	15959.17	265.99	4.43
	182.50	17655.97	294.27	294266.18	4904.44	10391.92	20971.22	349.52	5.83
	190.00	19136.96	318.95	318949.42	5315.82	11263.60	22730.29	378.84	6.31
8"	200.00	21229.73	353.83	353828.78	5897.15	12495.35	25216.01	420.27	7.00
	206.50	22632.08	377.20	377201.39	6286.69	13320.75	26881.69	448.03	7.47
10"	250.00	33211.03	553.52	553517.21	9225.29	19547.28	39447.04	657.45	10.96
	260.40	36074.61	601.24	601243.50	10020.73	21232.72	42848.31	714.14	11.90
12"	300.00	47880.89	798.01	798014.80	13300.25	28181.64	56871.44	947.86	15.80
	309.70	51027.24	850.45	850454.04	14174.23	30033.51	60608.58	1010.14	16.84
	339.60	61355.72	1022.60	1022595.32	17043.26	36112.63	72876.43	1214.61	20.24
	400.00	85121.58	1418.69	1418692.98	23644.88	50100.69	101104.78	1685.08	28.08
	500.00	133002.47	2216.71	2216707.78	36945.13	78282.33	157976.22	2632.94	43.88
	600.00	191523.55	3192.06	3192059.20	53200.99	112726.55	227485.75	3791.43	63.19
	700.00	260684.83	4344.75	4344747.24	72412.45	153433.36	309633.38	5160.56	86.01
	800.00	340486.31	5674.77	5674771.91	94579.53	200402.75	404419.11	6740.32	112.34
	900.00	430927.99	7182.13	7182133.20	119702.22	253634.74	511842.94	8530.72	142.18
	1000.00	532009.87	8866.83	8866831.11	147780.52	313129.30	631904.86	10531.75	175.53

SUTO iTEC GmbH

Werkstr. 2
79426 Buggingen
Germany

Tel: +49 (0) 7631 936889-0
Fax: +49 (0) 7631 936889-19
Email: sales@suto-itec.com

Website: <http://www.suto-itec.com>

CS-iTEC Co., Ltd.

Room 10, 6/F, Block B, Cambridge Plaza
188 San Wan Road, Sheung Shui, N.T.
Hong Kong

Tel: +86 (0) 755 8619 3164
Fax: +86 (0) 755 8619 3165
Email: sales@cs-itec.asia

Website: <http://www.cs-itec.com>